

SCENTWAVE SCENT DELIVERY SYSTEM

Installation and Operation Instructions



SCENTWAVE PARTS LIST

- ScentWave Delivery System
- Universal Mounting Bracket
- Mounting Plate
- Power Supply & 12' Extension
- Hardware Set:
 - (4) # 6 Hex-head slotted screws
 - (4) # 8 1 1/4" wood screw
 - (4) # 8 Plastic drywall anchors
 - (1) 1/4" Lock Nut

REQUIRED TOOLS

- Phillips Screwdriver
- Pencil
- Drill/Roto-Hammer
- 1/4" Drill Bit/Masonry Bit

SCENTWAVE SCENT DELIVERY SYSTEM


The ScentWave scent delivery system is ideal for creating ambient scent environments in any business setting. It uses a dry-air technology that releases fragrance without sprays, aerosols or heated oils. Adjustable duration and intensity settings make it easy to customize the scent output for any environment. Each ScentWave utilizes a disposable scent cartridge that is embedded with a unique fragrance. The ScentWave offers multiple installation options and is easy to maintain.

Recommended Placement

Many factors will help determine the best placement and operation of the ScentWave delivery system, including the size of the space and the airflow within the space. At a minimum, the ScentWave delivery system should be placed at the highest traffic entrance so guests experience scent as they first enter the space.

Use the following instructions as guidelines to determine the most efficient and effective placement of your ScentWave system:

1. The ScentWave should be installed at the main entrance to provide a positive first impression for guests.
2. In larger spaces where multiple machines are required, a “zoned” approach should be used to achieve optimal coverage. Divide the space into multiple zones and point a ScentWave into the center of each zone (See fig.1).
3. The ScentWave should be mounted close to the ground when possible.

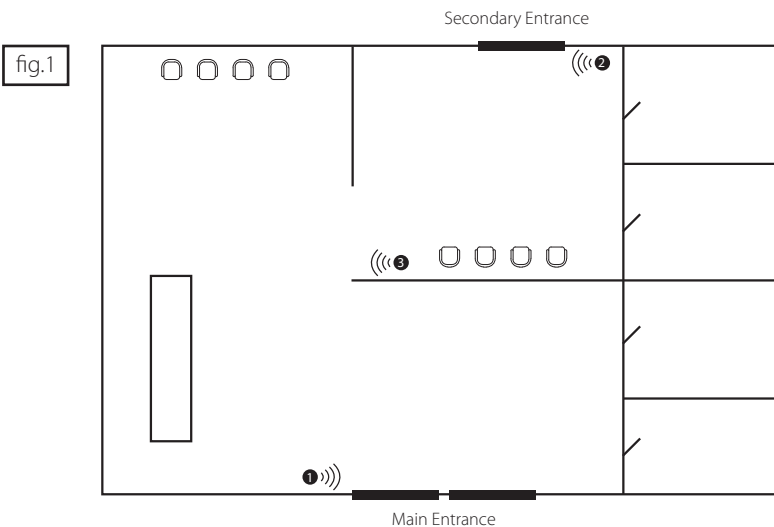

SCENTWAVE MOUNTING OPTION #2 – MOUNTING PLATE

The ScentWave can be placed on a flat surface or mounted to a wall or other structure using the provided mounting plate. Please refer to these photos and instructions to mount the ScentWave machine.



1. Hold the mounting plate to the wall in the desired location. Make sure the plate is level and located away from any objects that may obstruct air-flow. Mark the hole locations.



2. Drill starter holes for the wall anchors. Screw the anchors into the wall until they are flush.



3. Insert wall screws into the anchors leaving 0.25 inches (7.5 mm) between the top of the screw and the wall



4. Attach the mounting plate to the bottom of the ScentWave using the provided plate screws and pilot holes. Line up the slots in the mounting plate with the screws in the wall and slide into place. Adjust screws as necessary for a tight fit.



1. CONNECT THE POWER

Plug the power adapter into the DC POWER IN hole on the back of the ScentWave.

Required Hardware: Mounting Plate (1)
 Anchors (2)
 Wall Screws (2)
 Plate Screws (4)

Required Tools: Phillips Screwdriver
 Pencil
 Drill/Roto-Hammer
 1/4" Drill Bit/Masonry Bit

SCENTWAVE MOUNTING OPTION #2 – UNIVERSAL MOUNTING ARM

The ScentWave can be placed on a flat surface or mounted to a wall or other structure using the provided mounting bracket and universal mounting arm.



1. Remove the mounting ring from the base by loosening the retainer ring on the universal mount arm.



2. Hold the base in the desired location on the wall, and mark three screw holes with pencil. Attach the base to the wall using the three provided drywall anchors and screws.




3. Attach the universal mounting arm to the metal mounting plate using the provided screw.



4. Attach the mounting plate to the bottom of the ScentWave machine using the provided screws and pre-drilled pilot holes.



5. Attach the universal mounting arm to the base using the retainer ring on the arm.

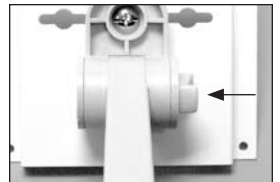

6. Carefully tighten the pivot end of the mounting arm.

Required Hardware: Mounting Plate (1)
 Universal Mount (1)
 Universal Mount Screw (1)
 Wall Screws (3)
 Plate Screws (4)

Required Tools: Phillips Screwdriver
 Pencil

SCENTWAVE OPERATION AND ADJUSTMENT

The ScentWave features adjustable timing and volume of scent delivery. The unit can be easily customized using the control features on the back panel.



1. CONNECT THE POWER

Plug the power adapter into the DC POWER IN hole on the back of the ScentWave.



2. SET THE MASTER POWER SWITCH TO TIMER

The TIMER setting will utilize the integrated timer and provide power to the system for a specified amount of time each day. NOTE: YOU MUST SET UP THE TIMER OR THE SCENTWAVE WILL NOT OPERATE CORRECTLY.



3. SET THE TIMER

Program the timer so the ScentWave is only active for up to 10 hours per day. This will help preserve the life of the fragrance cartridge.

A. SET THE TIME OF DAY

Set the time of day by pressing the PROGRAM SET button until "AM/PM" begins to flash. Use the + or - buttons to adjust the time of day.


B. SET THE ON TIME

The ON time is the time of day the system will begin operating. Set the ON time by pressing the PROGRAM SET button until "Event 1 ON" begins to flash. Use the + or - buttons to adjust the time.

C. SET THE OFF TIME

The OFF time is the time of day that the system will stop operating. Set the OFF time by pressing the PROGRAM SET button until "Event 1 OFF" begins to flash. Use the + or - buttons to adjust the time.

*Repeat steps B and C for a second event if desired.

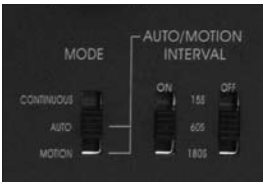

4. SET THE MODE

The ScentWave is designed to cycle on and off while operating. Set the cycle timing to control the amount of fragrance emitted. Set the Mode switch to AUTO and adjust the AUTO INTERVAL switches to set the cycle times. The Auto Interval ON switch determines how long (15, 60 or 180 seconds) the fan will operate during each cycle. The Auto Interval OFF switch determines how long (15, 60 or 180 seconds) the fan will turn off during each cycle.

Start with both switches in the 60 seconds position and adjust the switches as needed after one hour if more or less fragrance is desired.



5. SET THE VOLUME

The red VOLUME knob controls the speed of the ScentWave's fan and how far fragrance is projected. Start with the knob in the 12:00 position and adjust the knob as needed after one hour if more or less fragrance is desired.

CARTRIDGE - INSTALLATION AND REPLACEMENT

The ScentWave utilizes a clean, disposable scent cartridge that is embedded with a unique fragrance. The cartridges are easily replaced every 30 days.



1. Remove and dispose of the old scent cartridge. Open and remove the new scent cartridge.



2. Plug the scent cartridge cord into the connection on the inside bottom front of the ScentWave.



3. Insert the scent cartridge completely into the ScentWave.



4. Lock the scent cartridge in place by turning the cartridge clockwise.



5. Operate the ScentWave system using the control features on the back. Refer to page 6 for detailed operating instructions.

800.345.5000 * dmX.com
In Canada call 800.350.0369

